

Chandler Tool CT25 Stand-Up Glue Gun



INSTRUCTION MANUAL

Save this manual for future reference.

Important Safety Instructions

Please read carefully before using the glue gun.

- FOR HOUSEHOLD USE ONLY
- This glue gun is not intended for use by children or people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge
- Glue gun & glue get extremely hot; exercise caution during use
- Keep out of reach of children
- Inspect glue gun carefully before each use. Do not use if any parts are damaged
- Do not use glue gun in damp situations or near water. Do not expose glue gun to rain or moisture. Do not immerse glue gun in water
- Always use one of the provided stands. Never lay the glue gun on its side during operation
- Never put any object in glue gun other than 7mm 5/16" dia hot melt glue sticks
- Never attempt to remove a glue stick once it has been loaded into glue gun. The resulting damage may be irreparable.
Leave glue stick in glue gun after each use. Start with previous glue stick every time you use the glue gun
- Do not leave glue gun unattended while plugged in or hot
- Never pull the cord to unplug the glue gun
- Unplug glue gun from electrical outlet when not in use
- Make sure glue gun has cooled off before storage. Always store glue gun in a dry place, out of reach of children and pets
- Do not disassemble or attempt to repair glue gun. If the supply cord is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid hazard.

How To Use The Glue Gun

- Step 1:** Load a 7mm 5/16" dia hot melt glue stick into the back of the glue gun
- Step 2:** Press trigger several times until the glue stick firmly loads into the inlet tube
- Step 3:** Plug glue gun into an electrical receptacle
- Step 4:** Allow glue gun to warm up for approximately 5 minutes
- Step 5:** Gently squeeze trigger until glue flows from nozzle
- Step 6:** Press surfaces to be bonded together within 15 seconds
- Step 7:** For continued use load additional glue sticks into the back of the glue gun as glue runs out
- Step 8:** To reduce glue flow and drips, release trigger. Protect working surfaces with scrap paper or cardboard
- Step 9:** Unplug cord when finished. Never attempt to remove a glue stick once it has been loaded into the glue gun. Leave remaining glue stick in glue gun for next use

WARNING: This glue gun has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT force the plug into a non-polarized outlet. Do NOT modify the plug in any way.

CAUTION: Molten adhesive and glue gun nozzle can reach temperatures exceeding 380°F/193°C. Exercise caution! Do not touch glue gun nozzle or heated glue. If hot glue contacts skin, do not attempt to remove it. Immediately immerse the affected area in cold water for 10 minutes and seek professional medical attention as soon as possible.

Thank you from Chandler Tool!

Thank you for choosing Chandler Tool, your purchase means a lot to our family business! Please register at www.ChandlerTool.com today to activate your warranty, receive friendly lifetime support, and show us your latest project!